 
 


# BREAKERS AND RELAYS

 
ACT P/N	CARRIER P/N	TRANS/AIR P/N	DESCRIPTION
REL-500	201-806	112007	RELAY,12V 40 AMP. 4 PRONG
REL-510	10-00328-00	-	RELAY,70 AMP. 4 PRONG
SKT-510	-	-	SOCKET,RELAY,FOR REL-510

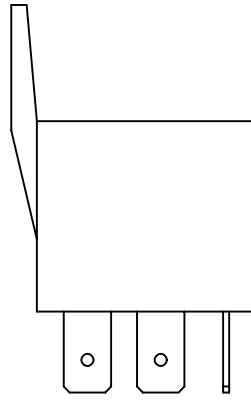

**REL-500**

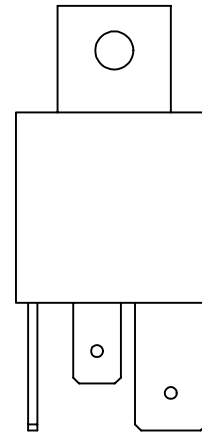


**REL-510**

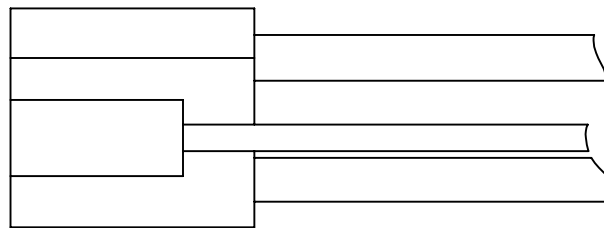

**SKT-510**

 ACT P/N	CARRIER P/N	TRANS/AIR P/N	DESCRIPTION
BRK-020	201-105	-	CIRCUIT BREAKER,20 AMP. MANUAL RESET
BRK-030	201-106	-	CIRCUIT BREAKER,30 AMP. MANUAL RESET
BRK-040	201-112	110001	CIRCUIT BREAKER,40 AMP. MANUAL RESET
BRK-050	201-107	-	CIRCUIT BREAKER,50 AMP. MANUAL RESET

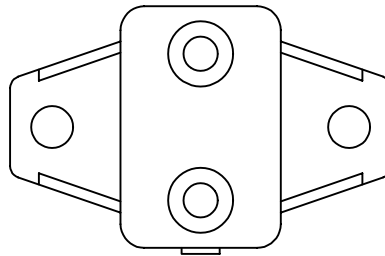

BRK-120	201-100	-	CIRCUIT BREAKER,20 AMP. AUTOMATIC RESET
BRK-140		-	CIRCUIT BREAKER,40 AMP. AUTOMATIC RESET

